



Hear and Learn UConnect Flexmike and Sharemike

Set Up, installation and troubleshooting instructions for both models

Does your Flexmike look like this?



PLEASE NOTE: The 975 and microphone(s) are paired together at the factory and all components should be kept together as a system. Moving them from one system, or room, to another will result in the need to re-pair.


CHARGING THE FLEXMIKE

Before use, the Flexmike should be charged



It will take 5-6 hours for the Flexmike to obtain a full charge. A fully charged Flexmike will last for up to 8 hours of use. If microphones are used daily, they should be charged each night.

Replacement lithium polymer battery packs may only be purchased through Hear and Learn.

Attach lanyard
Hang the Flexmike on the lanyard opposite the magnetic clasp.

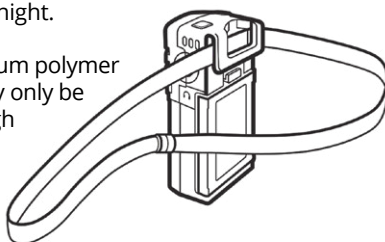

Connect cradle charger
Plug power cord into the cradle charger and then plug into a power point.

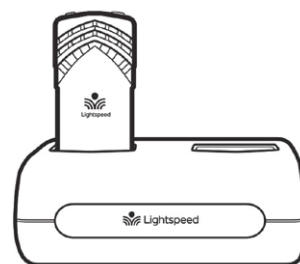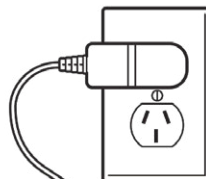


Charge flexmike

Place the microphones into the cradle charger. The power status light will glow red when it is charging. When charging is complete, the power status light will glow green. It takes about 5-6 hours to fully charge the microphone battery.


SETTING UP THE FLEXMIKE

Once the Flexmike is charged, follow these steps for use.


- 1 Remove the Flexmike from the charger and put it on by connecting the magnetic clasps behind your neck. Adjust the lanyard so that the top of the Flexmike aligns with the collarbone.
- 2 The Flexmike will automatically power on and mute when it is removed from the charger.
- 3 The microphone volume on the Flexmike is set at the factory to the midpoint. It is adjusted by the up / down buttons on the side of the mic.
- 4 While speaking in a normal voice, fine tune the microphone volume. Proper volume level should be as follows:
 - Your voice should be clearly heard by another person on the other side of the room.
 - You should barely be able to hear your own voice.
 - There should not be any audio "feedback" or squealing outside of 60-90cm (if there is, turn the volume down slightly).

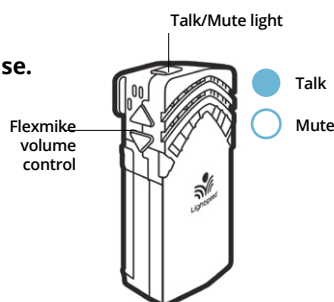

Align with Collarbone

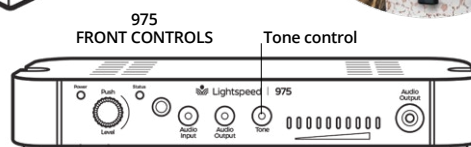


Got a SoundHouse? Open its door to see the controls on top of the 975

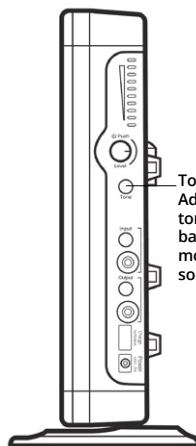


REDCAT
SIDE PANEL CONTROLS AND CONNECTIONS

Tone control:
Adjusts the audio tone, adding more bass or treble for a more rich or crisp sound.

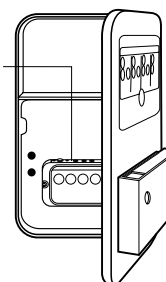

Tone control:
Select tone for adjustment

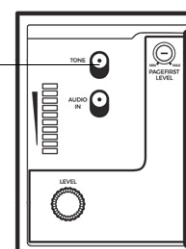

TOPCAT CONTROLS
(INSIDE SPEAKER DOOR)



Set up, installation and troubleshooting instructions for both models of Flexmike and Sharemike

Does your Flexmike
look like this?

DAILY USE OF THE FLEXMIKE

- 1 **At the start of the day, remove Flexmike from the charger**
 - The microphone will default to the Mute position, the status light will turn to white.
 - Place the microphone around your neck.
 - Press the power/mute button. The light will turn blue, indicating the microphone is active and ready to use.
 - Adjust volume with the UP/DOWN buttons if necessary.
 - If Flexmike needs to be powered down for some time, press and hold the power button. To power Flexmike again, press and hold the power button until the power status light turns white.
- 2 **Private conversations**
 - Mute the Flexmike during private conversations by momentarily pressing the power button. When muted, the blue light turns white.
 - When conversation is over, momentarily press the power button again to unmute the Flexmike.
- 3 **End of the day**
 - Place the Flexmike into the cradle charger and make sure the Power Supply is plugged in to an electrical outlet.
 - The Flexmike will stay powered on during charging, but will automatically be muted.
 - It is not necessary to turn off the 975 at end of day, but you may do so by pressing the power button on the front panel.
 - If you do want to power it down, when Flexmike is removed from charging the next day, it will automatically power the 975, RedCat or TopCat on.

Power / mute
button &
status light




Volume
control



Power light

Power button


Status light

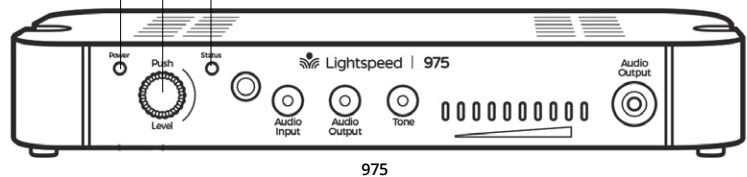

975


Status light

Power light

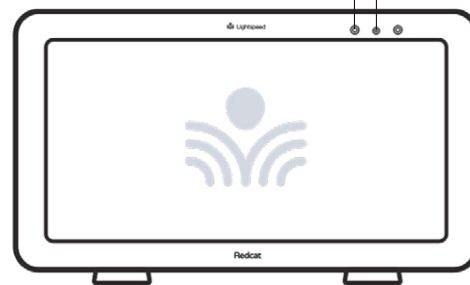

RedCat

Status light
Power light

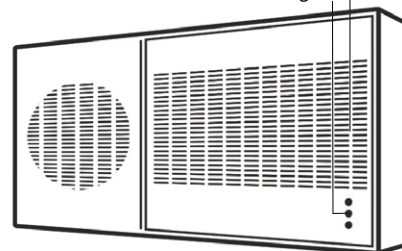

TopCat



Set up, installation and troubleshooting instructions for both models of Flexmike and ShareMike


Does your ShareMike
look like this?

CHARGING THE SHAREMIKE

Before use, the ShareMike should be charged


It will take 5-6 hours for the ShareMike to obtain a full charge. A fully charged ShareMike will last for up to 8 hours of use. If microphones are used daily, they should be charged each night.

Replacement lithium polymer battery packs may only be purchased through Hear and Learn.

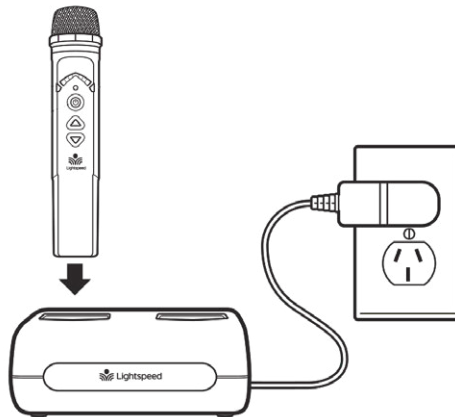

Connect cradle charger

Plug power cord into the cradle charger and then plug the AC end into an electrical outlet.

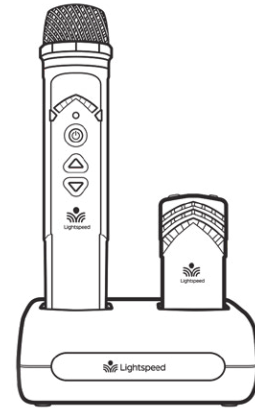



Charge ShareMike

Place into the cradle charger. The power status light will glow red when it is charging. When charging is complete, the power status light will glow green. It takes about 5-6 hours to fully charge the microphone battery. ShareMike and FlexMike can be charged together.

DAILY USE OF THE SHAREMIKE

At the start of the day, remove the ShareMike from the charger

- 1 Ensure the 975 is on. The white power light will glow.
- 2 Turn on the ShareMike by pressing and holding the power button until the LED lights.
- 3 Grip the barrel in the center section.
- 4 While speaking in a normal voice, increase the volume with the ShareMike until your voice is barely audible.

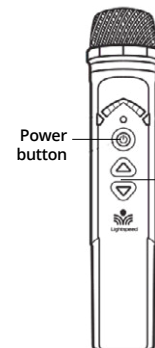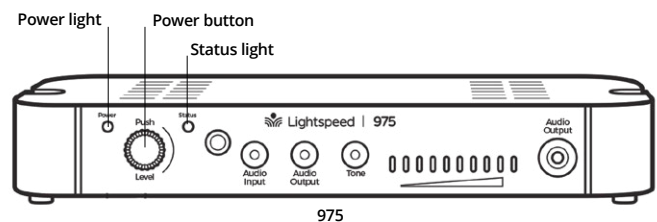



Set up, installation and troubleshooting instructions for both models of Flexmike and Sharemike

 
Does your Flexmike and your Sharemike look like these?







Your system is shipped with microphones and base units pre-paired for quick and easy use. If, for any reason, you need to pair new components, follow this pairing process.

PAIRING YOUR MICROPHONE TO 975, REDCAT OR TOPCAT

- 1 From a powered off state, point the IR transmitter lens toward the IR sensor (marked with red rings on illustrations below) on the 975, RedCat or TopCat (for Sharemike, the transmitter lens is located on the back of the microphone).
- 2 Press and hold the power button for 5 seconds until the mic 1 and mic 2 lights start flashing, then release the button and let the pairing process finish.
- 3 The "status" light on 975, RedCat and TopCat will light up indicating the pairing process is complete. The mic 1 or mic 2 light on the microphone will stay illuminated.




IR transmitters on microphones & IR sensors on 975, RedCat & TopCat (marked with red ring)

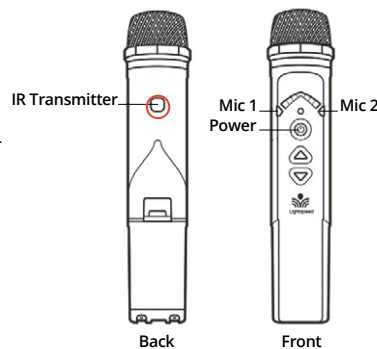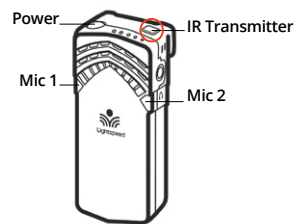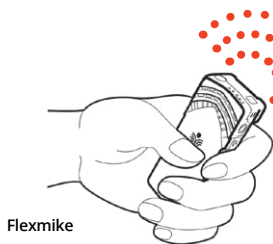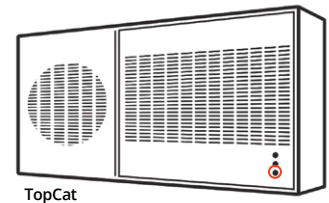

REPLACING BATTERIES IN FLEXMIKE & SHAREMIKE (Battery part #L3.7V)

FLEXMIKE

1. Push down on the latch and carefully pull the battery pack away from the Flexmike.
2. Insert new battery pack as shown and make sure the latch is secure.
3. Place the Flexmike in a cradle charger to charge the battery pack.

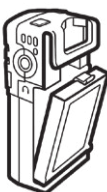

SHAREMIKE

1. Push down on the latch and carefully pull the battery pack away from the Sharemike.
2. Insert new battery pack as shown and make sure the latch is secure.
3. Place the Flexmike in a cradle charger to charge the battery pack.



PAIRING THREE MICROPHONES HELP VIDEO

Click on the image to watch the help video

hearandlearn.com.au/wp-content/uploads/2022/05/Pairing-Three-Microphones-to-a-Lightspeed-System-1.mp4



Set up, installation and troubleshooting instructions for both models of Flexmike and Sharemike

Does your Flexmike look like this?


CHARGING THE FLEXMIKE

Before use, the Flexmike should be charged


It will take 5-6 hours for the Flexmike to obtain a full charge. A fully charged Flexmike will last for up to 8 hours of use. If microphones are used daily, they should be charged each night.

Replacement batteries may only be purchased through Hear and Learn.

Attach lanyard
Hang the Flexmike on the lanyard opposite the magnetic clasp.

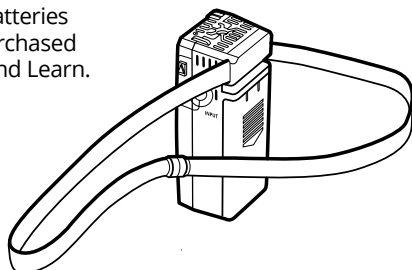

Connect cradle charger
Plug power cord into the cradle charger and then plug into a power point.

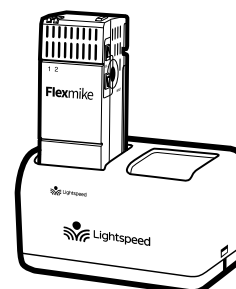

Charge flexmike
Place the microphone/s into the cradle charger. The power status light will glow red and the mic status light will glow blue when it is charging. When charging is complete, the power status light will glow green. It takes about 5-6 hours to fully charge the microphone battery.


USING THE FLEXMIKE

- 1 Remove the Flexmike from the charger and put it on by connecting the magnetic clasps behind your neck. Adjust the lanyard so that the top of the Flexmike aligns with the collarbone.
- 2 The power/mute button. Press and hold to power on or off. Press to mute.
- 3 Microphone volume may be adjusted at the microphone by using the UP/DOWN buttons on the side of the Flexmike.
- 4 While speaking in a normal voice, fine tune the microphone volume. Proper volume level should be as follows:
 - Your voice should be clearly heard by another person on the other side of the room.
 - You should barely be able to hear your own voice.
 - There should not be any audio "feedback" or squealing outside of 60-90cm (if there is, turn the volume down slightly).

REMEMBER:



This equipment supplements the user's voice so they are able to speak in a conversational tone. Having the volume set too high will result in feedback and listener fatigue.

- Once initial volume level is set, walk around the room and listen for overall audio quality.
- If further fine tuning is required, you may need to adjust the Tone control on the front of the 955 or the side of the RedCat or TopCat.

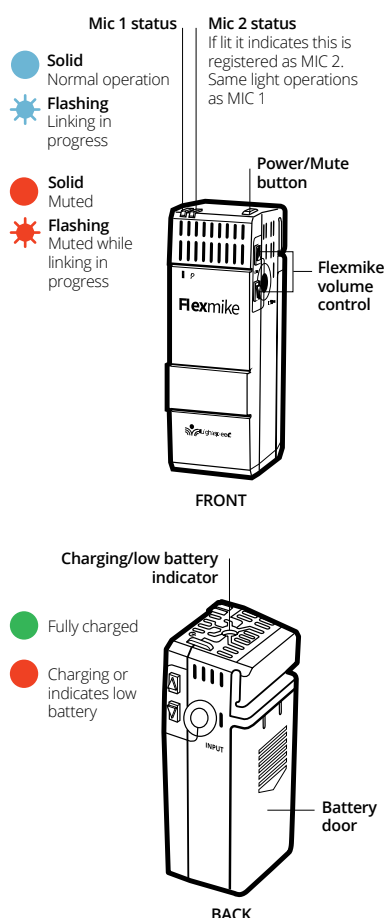

REPLACING BATTERIES IN FLEXMIKE (Battery part #NH.4V)

1. Slide the battery door open.
2. Carefully pull the battery away from the Flexmike and disconnect the cable.
3. Connect the cable of the new battery pack as shown and insert the battery pack into the compartment.
4. Slide the cover back on and snap into place.
5. Place the Flexmike into the cradle charger to charge the battery pack.

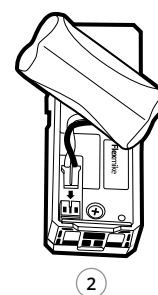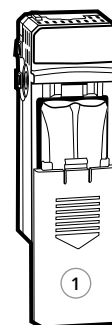




Set up, installation and troubleshooting instructions for both models of Flexmike and ShareMike

Does your ShareMike look like this?

CHARGING THE SHAREMIKE

- Before use, the ShareMike should be charged**
It will take 5-6 hours for the ShareMike to obtain a full charge. A fully charged ShareMike will last for up to 8 hours of use. If microphones are used daily, they should be charged each night.
- Make sure the charger is plugged into a wall outlet. Connect one end of the charging cable into the socket labeled CHARGE on the bottom of the ShareMike.
- Plug the other end into the USB socket on the back of the cradle charger.
- If the ShareMike is registered as MIC 2, the MIC 1 light on the microphone will glow red to indicate charging.
- Leave the ShareMike plugged in overnight (8-10 hours) to obtain a full charge. The light will turn green when charging is complete.
- If ShareMike is registered as MIC 1, low battery and charging indicator will be the MIC 2 light.
- During charging the blue light will stay on.

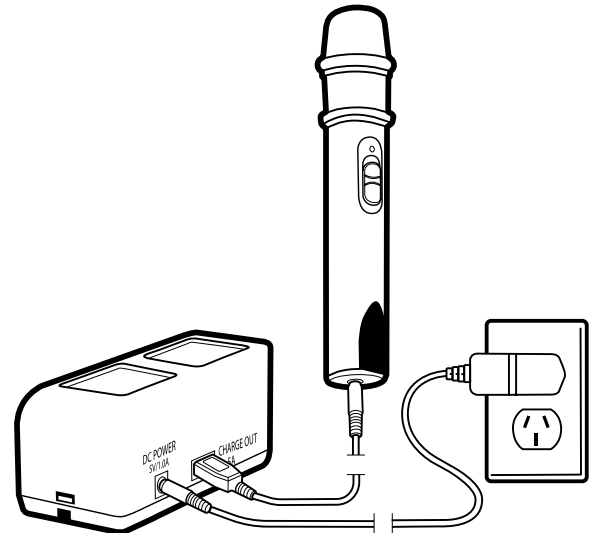

Charge ShareMike

Plug USB into the same cradle charger used for the Flexmike, into the cradle charger. When fully charged the MIC 2 will glow green. It takes about 5-6 hours to fully charge the microphone battery. Always charge overnight.



DAILY USE OF THE SHAREMIKE

At the start of the day, remove ShareMike from the USB lead plugged into charging cradle.

- Ensure the 955 Access is on. The blue light on the front of the 955 Access will glow.
- Turn on the ShareMike by pressing and holding the power button until the LED lights.
- Grip the barrel in the center section.
- While speaking in a normal voice, increase the volume on the 955 Access Microphone Volume knob until your voice is barely audible.

Remember:

This equipment is designed to supplement and distribute the user's voice so they are able to speak in a conversational tone. Having the volume set too high will result in feedback and listener fatigue.

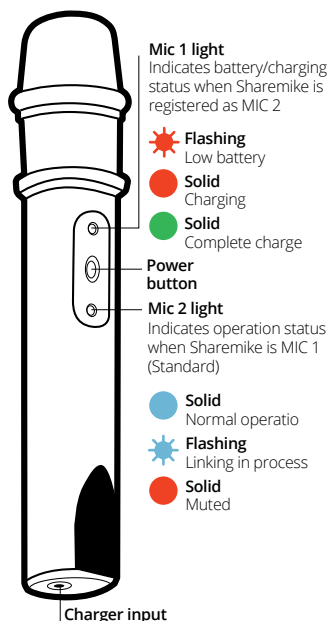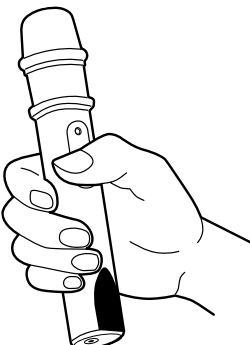

REPLACING BATTERIES IN SHAREMIKE (Battery part #NH2APK)

- Slide the battery door open.
- Carefully remove the battery pack from the ShareMike.
- Insert the new battery pack into the compartment, ensuring proper polarity is observed.
- Slide the cover back on and snap into place.
- Connect the ShareMike to a charging cable and plug into the back of the cradle charger to charge the battery pack.

