

Mobile PA Portable Audio System



1 PLUG IN POWER SUPPLY TO THE MOBILE PA BEFORE FIRST USE

Mobile PA should be charged for at least 4-5 hours before first time use in order to achieve a full day use.

Connect the AC power cord into the DC power supply. Insert the connector into the Mobile PA and plug the power cord into an electrical outlet. Mobile PA automatically powers on and the white Power light on the side panel will glow.

2 CHARGE THE MICROPHONES

Place the microphones into the integrated cradle charger. The microphone battery status light will glow red when it is charging. When charging complete, the battery status light will glow green.

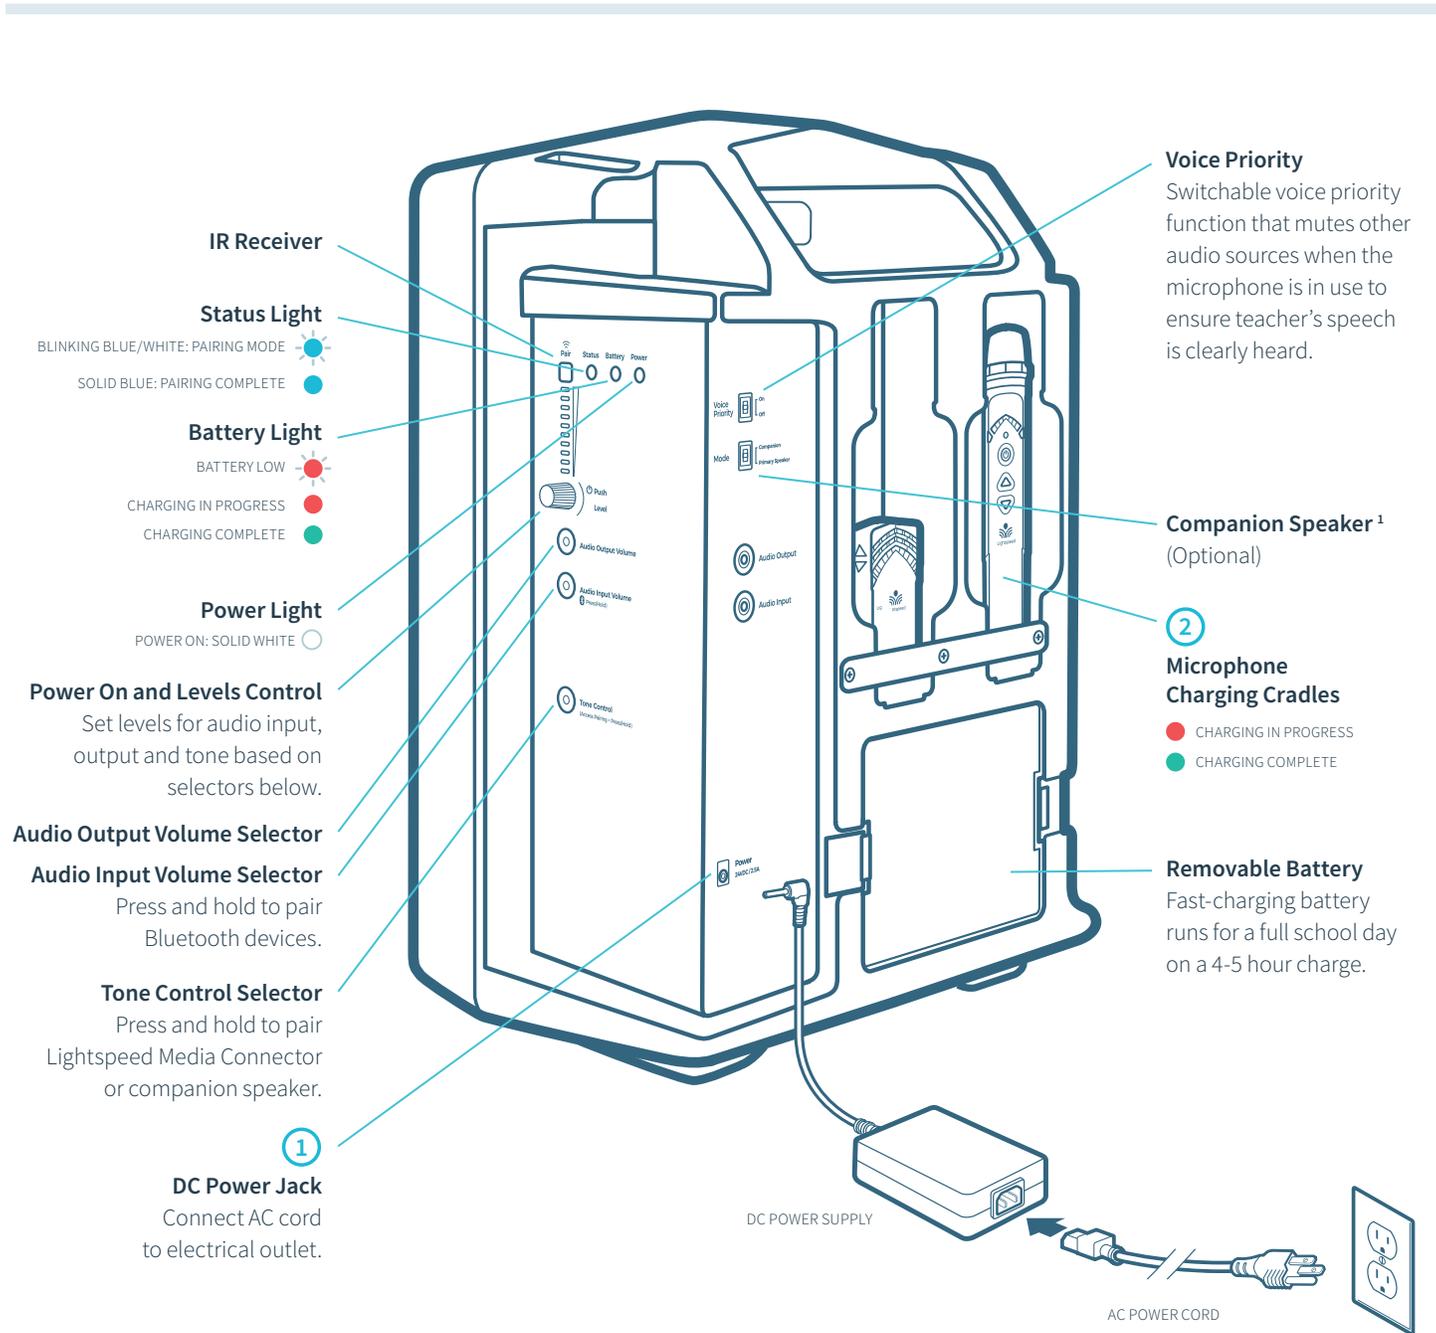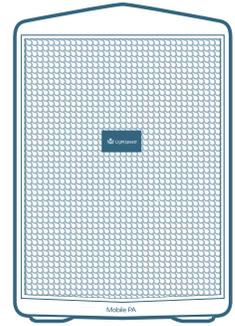

¹ If you wish to wirelessly connect two Mobile PA units together, please refer to the Mobile PA User Manual for connection and operating instructions.


USING THE FLEXMIKE



Remove microphone from charger. Press the mute button to unmute, hold near your mouth and begin speaking.

ALIGN WITH COLLARBONE

POWER/MUTE BUTTON ● TALK (BLUE)
○ MUTE (WHITE)

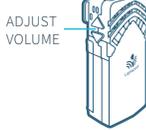

USING THE SHAREMIKE



Remove microphone from charger and press the mute button to begin speaking.

POWER/MUTE BUTTON ● TALK (BLUE)
○ MUTE (WHITE)



CHARGE MICROPHONES NIGHTLY


Place the microphones into the integrated cradle charger. The power status light will glow red when it is charging.

When charging is complete, the power status light will glow green.

It takes about 4-5 hours to fully charge the microphone battery.

Note: Microphones will only charge when Mobile PA is plugged into AC power.

○ NORMAL OPERATION
● CHARGING IN PROGRESS
● CHARGING COMPLETE

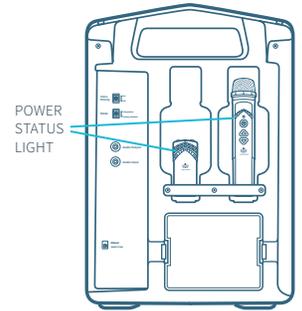

PAIRING MICROPHONES TO MOBILE PA

Your system is shipped with microphones and Mobile PA paired for quick and easy use. If you ever need to pair new components, follow this pairing process:

Microphones should be out of the charger while pairing.

1 POINT MICROPHONES AT MOBILE PA

From a powered off state, point the IR transmitter lens toward Mobile PA (for ShareMike, the transmitter lens is located on the back of the microphone).



2 PRESS AND HOLD POWER BUTTON

Press and hold the power button for 5 seconds until the Mic 1 and Mic 2 lights start flashing, then release the button and let the pairing process finish. Status light on Mobile PA will flash blue/white in pairing mode.

3 CONFIRM STATUS

The status light on Mobile PA will glow blue indicating the pairing process is complete. The Mic 1 or Mic 2 light on the microphone will stay illuminated.

If the microphone is out of range, it will automatically shut off after 30 minutes of trying to reconnect. Once you are back in the classroom, or in range, simply press the power button on the microphone to power it up.

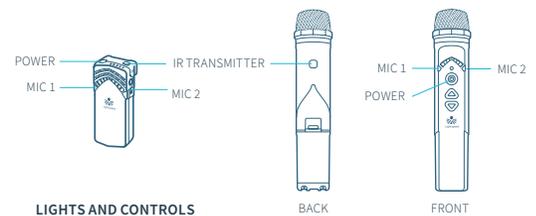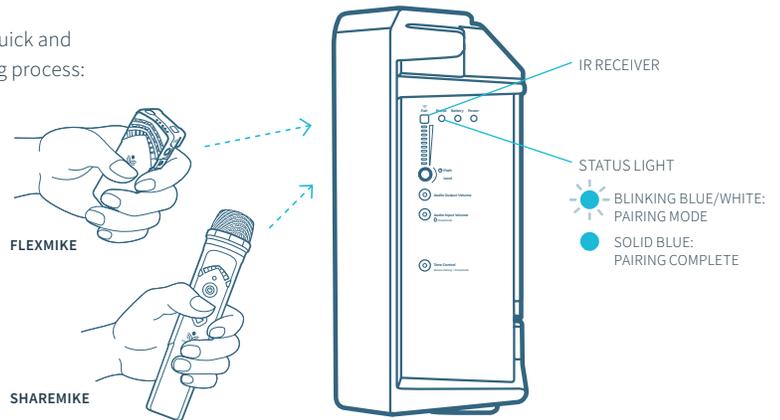

PAIRING PERSONAL DEVICE TO MOBILE PA BLUETOOTH

1 SET UP YOUR OTHER AUDIO SOURCE

On your personal device, make sure your Bluetooth setting is on and in the search mode.

2 PUT MOBILE PA IN PAIRING MODE

Press and hold Audio Input Volume Selector button for 3-5 seconds until status light starts blinking blue to be discovered by your personal device.

3 PAIR TO YOUR DEVICE

Select Lightspeed_MPA on your personal device and complete pairing process.

