

# Hear and Learn UConnect Soundhouse

Complete Storage for Teacher/Agile Hearing Augmentation Solution

## HearAssist

Best of breed post-install commissioning, staff training and ongoing support to ensure industry best practice.

✓ **Compliance Ready:** Requirement to deliver hearing augmentation (UConnect SoundHouse's collection of inbuilt amplified audio including PA and its transmission to receivers in hearing aids achieved.)

Expert Access Consultant report re-compliance readiness available on request.

- ✓ **Agnostic:** Any transmitter to hearing aids can be connected to UConnect SoundHouse. Future proof to changes in brand of receivers supplied to learners by the Federal Government.
- ✓ **Local:** All audio particular to the learning space is delivered to hearing aided learners, teachers and visitors and not just generic PA signals.
- ✓ **Signage:** Required bespoke hearing augmentation braille and tactile signage supplied along with child friendly operating instructions.
- ✓ **Low footprint:** Low profile UConnect SoundHouse, smallest cable free teacher microphone, discreet speaker systems.
- ✓ **Quality audio:** Bespoke internal electronics makes audio hearing augmentation ready with PA priority. This means hearing aided people receive PA signals free from other audio to maximise safety.



SoundHouse Interior View. Secure space for storing personal items and charging devices.

Depending on size and use of space, more than one SoundHouse may be required


1.2mm powder coated steel housing

Recessed SoundHouse shown. Can be wall mounted

All electronics, cabling and electricals are stored in a basket at the rear of SoundHouse faceplate - no GPO's or wall plates needed; they are all in basket ready to go.



600mm required at mounting location to allow access to SoundHouse  
500mm

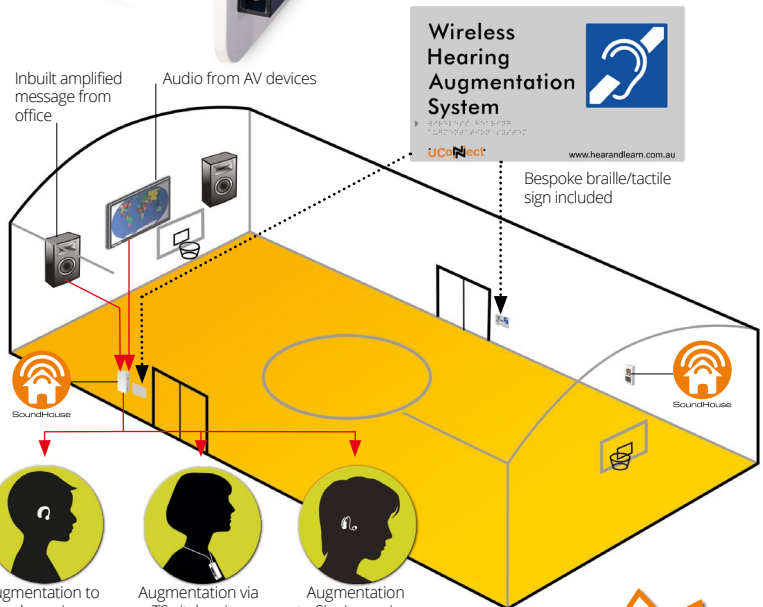

Augmentation to Phonak receiver on hearing aid of primary age learners (no phone, no tablet, no loop required)



Augmentation via TSwitch using neck loop (mostly for teachers and visitors)



Augmentation to Signia receiver on hearing aid of secondary age learners (no phone, no tablet, no loop required)



Not all learner hearing aids have TSwitch receivers! Induction/floor loops/neck loops will not work for everyone.

Contact Hear and Learn for install instructions