



Drill Template

for wall-mounting the Redcat System

Foot

Foot

1 ○

2 ○



Drill holes

5 ○

3 ○


4 ○

Materials Required

Drill Bit: Size appropriate for the anchors or screws being used.

Anchors: Needed for mounting on drywall, plasterboard, or cement block.

Screws: Wood screws or screws appropriate for anchors.

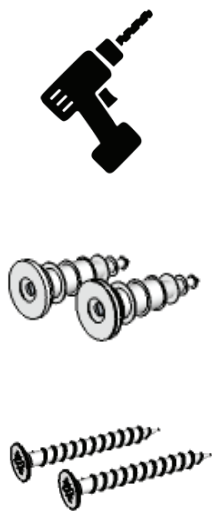

6 ○

7 ○

Security Tab (optional)

Instructions

Determine the best location for the Redcat, refer to the user manual provided with this product. For wall mounting, the Redcat should be mounted 7 to 8 feet from the floor.

1. Start by leveling this template and taping to the desired location on the wall.
2. Drill pilot holes through the template and into the wall (holes #1-4)
NOTE: if installing optional security tab, also drill holes #5-7
4. Remove the template and insert anchors
5. Insert screws through the feet and tighten to the wall
6. Insert screws through the optional security tab bracket and tighten to the wall.
7. Slide the Redcat onto its mounted feet.
If the safety tab is installed, it should snap into place preventing system removal.



AC-IGRCDT-A

IG0432US01-4

PH: 800.732.8999